



No.:	Parts no.	Description	Q'ty	No.:	Parts no.	Description	Q'ty
1C	6302R01	3/16" Nosepiece	1	26	6302R26	Piston Head Lock Screw	1
1A	6302R01-1	1/8" Nosepiece	1	27	6302R27	Plunger Rod	1
1B	6302R01-2	5/32" Nosepiece	1	28	6302R28	O-Ring Seal	1
2	6302R02	Head	1	29	6302R29	Damping Ring	1
3	6302R03	Jaw Housing	1	30	6302R30	Trigger Arm	1
4	6302R04	Jaws	3	31	6302R31	Air Cylinder Body	1
5	6302R05	Jaw Pusher	1	32	6302R32	Roll Pin	1
6	6302R06	Spring	1	33	6302R33	Spring	1
7	6302R07	Nut	1	34	6302R34	Air Cylinder Cap	1
8	6302R08	Jaw Housing Coupler	1	35	6302R35	O-Ring -Valve Tube	1
9	6302R09	Wiper Ring	1	36	6302R36	Value Spring	1
10	6302R10	"O" Ring Seal	2	37	6302R37	Value Plate	1
11	6302R11	"O" Ring Washer	1	38	6302R38	Valve pressure Spring	1
12	6302R12	Hydraulic Section	1	39	6302R39	O-Ring Seal	4
13	6302R13	"O" Ring Seal	1	40	6302R40	Wrench	1
14	6302R14	Hydraulic Plunger	1	41	6302R41	Screw Plug	1
15	6302R15	O-Ring Seal	1	42	6302R42	O-Ring Washer	1
16	6302R16	O-Ring Washer	1	43	6302R43	Sealing Washer	1
17	6302R17	O-Ring Seal	1	44	6302R44	1/4" Air Inlet Fitting (F)	1
18	6302R18	Hydraulic Return Spring	1	45	6302R45	Air Inlet Plug	1
19	6302R19	Hydraulic Rod Guide	1	47	6302R47	Hand Grip	1
20	6302R20	Lock Nut	1	48	6302R48	Plastic Bottle	1
21	6302R21	Screw Plug	1	49	6302R49	Valve Tube	1
22	6302R22	Front Piston Head Disc	1	50	6302R50	Rubber Cushion	1
23	6302R23	Piston Head Packing Ring	1	-	6302R51	Wrench (14mm)	2
24	6302R24	Rear Piston Head Disc	1				
25	6302R25	Piston Head Spring Washer	1				



GP6302 3/16" Air Riveter Kit

Dear Customer,

Congratulations on purchasing this Geiger air tool.

This is a genuine Geiger air tool and is covered by a 6 month factory warranty. This warranty covers the tool against problems caused directly by manufacturing defect and faulty materials. If the tool is found to be defective upon initial operation, it may be considered as a replacement warranty; otherwise, the warranty is for repair only.

The warranty excludes normal wear and tear, misuse, abuse, problems caused by the attempted repair by the owner or by unauthorized personnel, use of non genuine parts in a repair and damage caused by impact. Warranty will be deemed to be voided if the tool is affected by contaminants entering the tool either via the air supply or from a dirty working environment.

Normal wear and tear parts include bearings, vanes, and collets. Consumable items that are distributed with some tools such as abrasives, backing pads, chisels, blades and needles are not covered by any warranty.

Additionally, we recommend the following procedures to keep you tool in top condition.

1. Oil daily with a quality air tool oil.
2. If the tool has a grease nipple, regularly grease it with a Teflon based grease.
3. Do not leave the tool lying on the ground or in a dirty environment, as dirt and abrasive compounds can easily enter the air inlet and enter the motor of the tool upon its next use.
4. The use of an inline air filtration system is strongly recommended. A water separator is mandatory as water in the air line can very quickly lead to damage and seizure of the tools moving parts.

SAFETY INSTRUCTIONS for GP6302 3/16" AIR RIVETER KIT

- | | |
|----|--|
| 1 | Read all the instructions before using the tool. All operators must be fully trained in its use and aware of these safety rules. |
| 2 | Do not exceed the recommended air pressure. |
| 3 | Use personal safety equipment. |
| 4 | Use clean compressed air at the recommended pressure. |
| 5 | If the tool appears to malfunction, stop operating immediately and arrange for service and repair. |
| 8 | The tool is not electrically insulated. Never use the tool if there is any chance of it coming into contact with live electricity. |
| 7 | Use only Genuine Geiger spare parts. Do not improvise or make temporary repairs. |
| 8 | Do not lock, tape, wire etc. the on/off valve in the run position. The trigger/lever etc. must always be free to return to the off position when it is released. |
| 9 | Always shut off the air supply to the tool, and depress the trigger/lever etc. to exhaust air from the feed hose before fitting, adjusting or removing the working attachment. |
| 10 | Check hose and fitting regularly for wear. Replace if necessary. Do not carry the tool by its hose and ensure the hand is remote from the on/off control when carrying the tool with the air supply connected. |
| 11 | It is expected that users will adopt safe working practices and observe all relevant legal requirement when installing, using or maintaining the tool. |
| 12 | Do not install the tool unless an easily accessible and easily operable on/off valve is incorporated in the air supply. |
-